




Flap Replacement Directions


Step 1

Locate the screws that are at the top of the interior side of the flap and loosen them. If you have a double flap door, you will have to lift the other flap first.

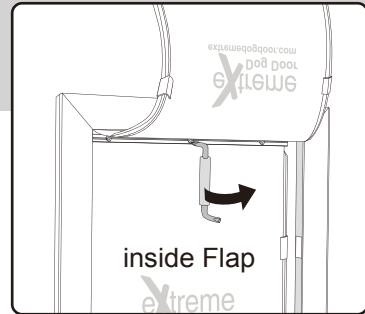


Step 2

Remove the old flap.

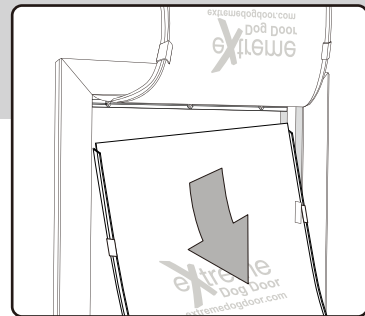

Step 3

Insert the new flap, making sure that you can read the logo.

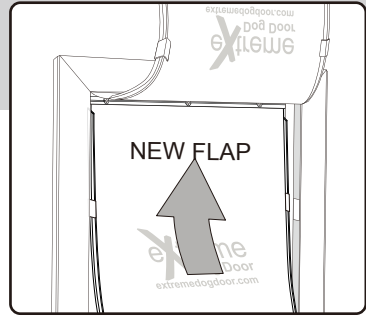

Step 4

Tighten the screws clockwise.

